RC48746MCzRev2:9225 47507 MEE pump - Jon 3/11/09 10:51 Page 1

morphy richards®

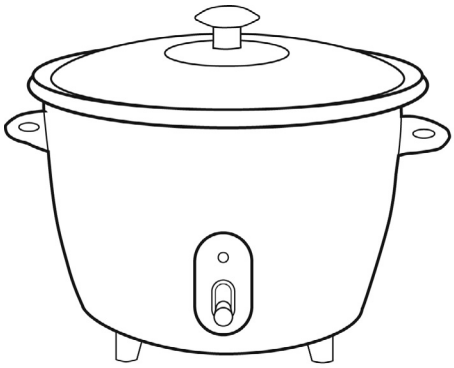

Rice Cooker

Please read and keep these instructions

GB

Rýžovar

Přečtěte si prosím tyto pokyny a uschovejte si je

CZ

CE

2year guarantee
2 ans de garantie | 2 años de garantía

www.morphyrichards.com

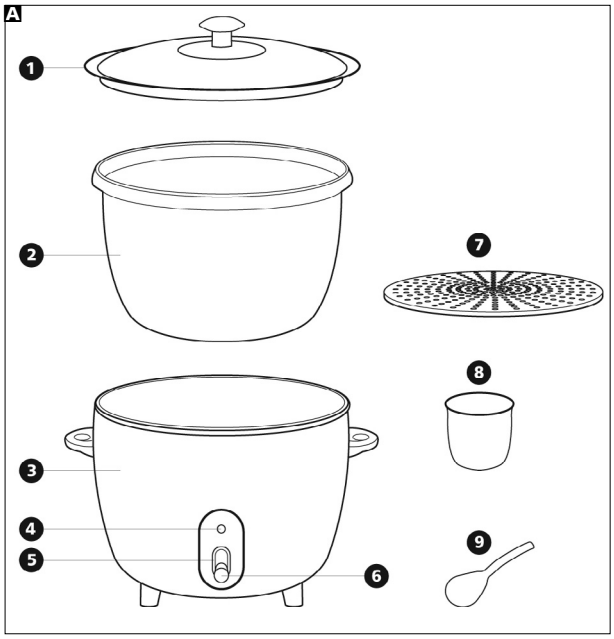
A
1
2
3
4
5
6
7
8
9

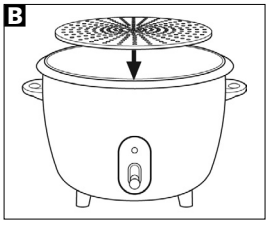
B

GB

Getting the best from your new rice cooker...

- Do not keep food warm for longer than two hours.
- Do not lift the lid during the keep warm period.
- Rice must be thoroughly washed before using.
- During cooking, certain varieties of rice may cause a build up of steam within the cooker, resulting in some spitting from the vent and under the lid.
- On removing the rice from the inner bowl, a small amount of golden coloured rice may be noted on the base of the bowl. This is normal, allow the bowl to cool, fill with warm soapy water and allow to soak which will loosen the rice and make cleaning easier.

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Personal Safety

- Do not touch hot surfaces. Use oven gloves or a cloth when removing lid or handling hot containers as hot steam will escape.
- To protect against fire, electric shock and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Unplug from the socket when not in use, before putting on or taking off attachments, and before cleaning.
- Do not operate any appliance with a damaged lead or plug, or after an appliance has malfunctioned, or has been dropped or damaged in any way. Contact Morphy Richards for advice on examination, repair, or electrical or mechanical adjustment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always use heat resistant gloves to remove the inner bowl and lid from the cooker.

Location

- Ensure that this appliance is situated out of the reach of children.
- Do not place directly under kitchen wall cupboards when in use as it produces large amounts of steam. Avoid reaching over the steamer when in use.
- Do not use outdoors.

Mains Lead

- The mains lead should reach from the socket to the base unit without straining the connections.
- Do not let the cord hang over the edge of the table or the counter and keep it away from any hot surfaces.
- Do not let the lead run across an open space e.g. between a low socket and table.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

GB

Children

- Never allow a child to operate this appliance.
- Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children should be supervised to ensure that they do not play with the appliance.

Other safety considerations

- Do not reheat cooked rice in the cooker.
- The use of attachments or tools not recommended by Morphy Richards may cause fire, electric shock or injury.
- Extreme caution must be used when moving the cooker when it contains hot food, water, or other hot liquids.
- To open, lift the lid off towards yourself but tilted away from you.
- Do not use any parts of this product in a microwave or on any cooking/heated surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not wash rice in the pot as it may deform and will affect the cooking process.
- Never use the cooker to boil acid or alkaline foodstuff. Do not leave it in a damp or corrosive environment.
- The use of sharp implements inside the bowl may damage the non-stick coating.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).

WARNING: This appliance must be earthed.

UK only

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

Features

1. Glass lid
2. Bowl
3. Main unit
4. Pilot / keep warm light
5. Cook light
6. Cook ON/OFF switch
7. Pasta pad
8. Measuring beaker
9. Spatula

OPERATION

Before first use

Before using your cooker for the first time, wash and dry the bowl and lid.

Assembly

Assemble as shown **A**.

- Be sure to keep the space between the pot and the heating plate clean and free of water drops, dust, rice grains or any other foreign matter. If not, the cooker's performance will be affected and the element could possibly burn out.
- Do not slant the pot, otherwise it's bottom will not be in full contact with the heating plate and the element may burn out.
- Do not switch the power on until ready to cook.

Cooking rice

1 Use the measuring beaker provided to measure the rice, filling level to the top. As a guide, one cup of rice is sufficient for one person, but this will vary according to individual taste.

2 Thoroughly wash the rice in several changes of water and drain. Failure to do so may cause poor results and/or a build-up of steam within the cooker. Do not wash the rice in the inner bowl as it may be damaged.

3 Transfer the rice to the inner bowl and level the surface. The markings on the inside of the bowl are for measuring the amount of water and are given in litres and cups. Add cold water to the corresponding level marked on the inside of the bowl. For example, to cook 6 cups of rice, place the washed rice into the inner bowl and then fill with water up to the six cup level.

- Minimum capacity is 4 cups, maximum is 10 cups.
- Never fill with water straight from the tap, use the measuring beaker.

IMPORTANT: Do not fill above the top level indicated.

4 Place the inner bowl in the cooker, ensuring that there is no rice or any moisture on the outside of the bowl.

5 Cover with the lid, ensuring that the vent hole in the lid is situated away from you.

6 Plug the cooker into the power supply. The amber pilot will light up.

7 Press down the switch and the cooker will start. The blue light will come on and the amber light will go off.

Note: During cooking, it is normal for the lid to rise up slightly and water to bubble around the edge.

8 The cooker knows when the food is done by measuring temperature and weight. When the food is done, the main heater will turn off automatically and the cooker will switch into 'keep warm'. The blue light will go out and the amber light will go on to indicate keep warm.

9 Food left to keep warm should not be allowed to dry out and should be stirred occasionally, otherwise it may burn and stick to the bowl. Never leave the cooker on keep warm for more than two hours.

10 Carefully lift the lid and allow any condensation to drip into the cooker. Use the spatula to fluff up the rice. Replace the lid as quickly as possible. Consume the stirred rice within 1 hour. Small quantities (3 to 4 cups) should be consumed immediately.

11 Switch off at the mains and unplug the mains cable. Remove the bowl to serve the food.

- Never take the bowl out of the cooker when it is filled with water.
- We do not recommend cooking packet type savoury rice.

Cooking pasta

1 Use the measuring beaker provided to measure the pasta, filling level to the top. As a guide, 2 or 3 cups of pasta is sufficient for one person, but this will vary according to individual taste.

2 For best results when cooking pasta, fit the special pasta pad **B**.

3 Transfer the pasta to the inner bowl and level the surface. The markings on the inside of the bowl are for measuring the amount of water and are given in litres and cups. Add water to the corresponding level marked on the inside of the bowl. For example, to cook 6 cups of pasta, place the pasta into the inner bowl and then fill with water up to the six cup level.

- Minimum capacity is 4 cups, maximum is 10 cups.

- Never fill with water straight from the tap, use the measuring beaker.

  IMPORTANT: Do not fill above the top level indicated.

4 Place the inner bowl in the cooker, ensuring that there is no pasta or any moisture on the outside of the bowl.

5 Cover with the lid, ensuring that the vent hole in the lid is situated away from you.

6 Plug the cooker into the power supply. The amber pilot light will light up.

7 Press down the switch and the cooker will start. The blue light will come on and the amber light will go off.

  Note: During cooking, it is normal for the lid to rise up slightly and water to bubble around the edge.

8 For all types of pasta, we recommend that you follow the cooking time on the packet plus a further 10 minutes. At the end of the cooking time, you can switch the cooker to 'keep warm' if required. The blue light will go out and the amber light will go on to indicate keep warm.

9 Carefully lift the lid and allow any condensation to drip into the cooker. Use the spatula to stir the pasta which is then ready to eat. Replace the lid as quickly as possible if leaving on keep warm. Consume the pasta within 1 hour.

10 Switch off at the mains and unplug the mains cable. Remove the bowl to serve the food.

- Never take the bowl out of the cooker when it is filled with water.

Tips for best cooking results

- Make sure that the rice and pasta is spread over the whole surface of the bowl to ensure even cooking.
- You may find that for your own personal taste, you need to slightly adjust the amount of water added. For a softer rice or pasta, add a little more water, and for a firmer rice or pasta, a little less water.
- The cooking times may vary according to the quantity and type of rice or pasta cooked.
- A thin crust of rice may form on the base, particularly when cooking Italian or easy-cook type rice, or when cooking smaller quantities. Wiping half a teaspoon of oil over the base may help reduce this forming, but this occurrence is not always preventable.

For recipes, please see www.morphyrichards.com

CLEANING AND MAINTENANCE

Before cleaning and maintenance, switch the appliance off and unplug it.

- Wash the bowl and lid in warm soapy water and dry well.
- Wipe the main unit with a damp cloth. Do not use any abrasive or solvent-based cleaner.
- If food has stuck to the bottom of the bowl, allow to soak for a while before washing it.
- Do not immerse the main unit in water, nor pour water into it, only the inner bowl may be immersed in water.
- Ensure the area between the main unit and inner bowl is always clean and free from any rice or pasta particles etc. This is important to ensure proper contact between the two.

  IMPORTANT: The brown marks and scratches that may appear after many hours of use are not a problem. We guarantee that the non-stick coating complies with the standards and regulations on materials suitable for contact with food.

Taking care of the bowl

Use a plastic or wooden spoon and not a metal one so as to avoid damaging the bowl surface.

Safety Cut-out

The cooker is fitted with a thermal fuse, which will cut the current off automatically in an incident. If this happens, the cooker must be returned to Morphy Richards or an authorised service agent for repair.

GB

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product.
- Model number as shown on the underside of the appliance.
- Serial number as shown on the underside of the appliance.

UK Helpline	**0844 871 0956**
Replacement Parts	**0844 873 0722**
Ireland Helpline	**1800 409 119**

YOUR TWO YEAR GUARANTEE

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.
Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and

dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the instructions supplied. For example crumb trays should have been emptied regularly.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.

2 The appliance has been used on a voltage supply other than that stamped on the products.

3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

4 Where the appliance has been used for hire purposes or non domestic use.

5 The appliance is second hand.

6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

7 The guarantee excludes consumables such as bags, filters and glass carafes.

8 Batteries and damage from leakage are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

CZ

Jak svůj nový rýžovar nejlépe využijete...

- Neudržujte potraviny teplé déle než dvě hodiny.
- Během udržování teploty nezvedejte poklici.
- Rýži před použitím řádně propláchněte.
- Při vaření některých druhů rýže se může v rýžovaru hromadit větší množství páry, která pak může prudce unikat ventilem poklice a pod poklicí.
- Při vyjímání rýže z vnitřní mísy můžete na dně mísy najít menší množství dozlatova zbarvené rýže. To je normální – nechejte mísu vychladnout, naplňte ji teplou vodou s trochou mycího prostředku a nechejte rozmočit, čímž se rýže uvolní a mísa půjde snadněji umýt.

DŮLEŽITÉ BEZPEČNOSTNÍ POKYNY

Používání každého elektrického spotřebiče vyžaduje dodržování následujících běžných bezpečnostních pravidel.

V první řadě hrozí nebezpečí úrazu nebo smrtelného úrazu a ve druhé řadě hrozí nebezpečí poškození samotného spotřebiče. Tato nebezpečí jsou v textu vyznačena podle následujících konvencí:

VAROVÁNÍ: Nebezpečí úrazu osob!

DŮLEŽITÉ: Nebezpečí poškození spotřebiče!

Kromě těchto upozornění poskytujeme následující bezpečnostní doporučení.

Osobní bezpečnost

- Nedotýkejte se horkých povrchů. Při manipulaci s poklicí nebo s horkými nádobami používejte chňapky nebo utěrky, protože dochází k úniku horké páry.
- Neponořujte kabel, zástrčku nebo spotřebič do vody ani jiných tekutin, abyste zabránili požáru, úrazu elektrickým proudem a zranění.
- Když spotřebič nepoužíváte, připojujete k němu nebo z něj odebíráte součásti a před čištěním ho odpojte od sítě.
- Nespouštějte spotřebič s poškozeným kabelem či zástrčkou nebo pokud je porouchaný, spadl na zem nebo je jakkoliv poškozený. Pokud potřebujete poradit s přezkoušením, opravou nebo elektrickým či mechanickým nastavením, kontaktujte společnost Morphy Richards.
- Tento spotřebič není určen k používání osobami (včetně dětí) se sníženými fyzickými, smyslovými nebo mentálními schopnostmi nebo s nedostatečnými zkušenostmi či znalostmi, pokud na ně nedohlíží nebo je ohledně používání spotřebiče nepoučila osoba zodpovědná za jejich bezpečnost.
- Při vyjímání vnitřní mísy nebo manipulaci s poklicí vždy používejte ochranné chňapky.

Umístění

- Zajistěte, aby byl spotřebič umístěn mimo dosah dětí.
- Při vaření jej neumísťujte přímo pod kuchyňské skříňky, protože dochází k vytváření velkého množství páry. Při vaření se nenaklánějte přes parní hrnec.
- Nepoužívejte venku.

Napájecí kabel

- Napájecí kabel by měl dosáhnout od zásuvky k podstavci spotřebiče, aniž by docházelo k namáhání přípojek.
- Nikdy nenechávejte kabel viset přes okraj stolu nebo pultu a udržujte jej v dostatečné vzdálenosti od horkých povrchů.
- Nenechávejte kabel vést otevřeným prostorem, např. mezi zásuvkou u země a stolem.

Děti

- Nedovolte, aby tento spotřebič obsluhovaly děti.
- Dětem v kuchyni hrozí nebezpečí, a to zejména když jsou bez dozoru a používají se spotřebiče nebo se vaří.
- Učte děti, aby si uvědomovaly nebezpečí v kuchyni, varujte je před riziky, která hrozí při sahání do míst, na něž dobře nevidí nebo na která sahat nemají.
- Děti musejí být pod dohledem, aby se zaručilo, že si se spotřebičem nehrají.

Další bezpečnostní pokyny

- Uvařenou rýži v rýžovaru neohřívejte.
- Používání příslušenství nebo nástrojů, které společnost Morphy Richards nedoporučuje, může způsobit požár, úraz elektrickým proudem nebo zranění.
- Při manipulaci se spotřebičem, který obsahuje horké jídlo, vodu nebo jiné horké tekutiny, je nutné být mimořádné opatrný.
- Poklici zvedejte směrem k sobě, ale nakloněnou od sebe.
- Součásti tohoto výrobku nepoužívejte v mikrovlnné troubě ani na jiných varných/topných plochách.
- Neumisťujte spotřebič na horký plynový nebo elektrický vařič či do jeho blízkosti ani do rozehřáté trouby.
- Neproplachujte rýži v hrnci, protože by se mohl zdeformovat a negativně ovlivnit proces vaření.
- Nikdy ve spotřebiči nevařte kyselé nebo zásadité potraviny. Nenechávejte jej ve vlhkém nebo korozivním prostředí.
- Při použití ostrých nástrojů uvnitř mísy může dojít k poškození nepřilnavého povrchu.

Elektrické požadavky

Zkontrolujte, zda napětí na výkonovém štítku spotřebiče odpovídá síťovému napětí v domácnosti, které musí být střídavé.

Funkce

1. Skleněná poklice
2. Mísa
3. Tělo spotřebiče
4. Kontrolka zapnutí / udržování teploty
5. Kontrolka vaření
6. Zapnutí / vypnutí vaření
7. Podložka na těstoviny
8. Odměrka
9. Špachtle

PROVOZ

Před prvním použitím

Před prvním použitím rýžovaru vymyjte a do sucha utřete mísu a poklici.

Sestavení

Sestavte spotřebič podle ilustrace **A**.

- Prostor mezi mísou a varnou plotýnkou udržujte čistý a bez vodních kapek, prachu, rýžových zrnek a dalších nečistot. V opačném případě bude negativně ovlivněn výkon rýžovaru a topné těleso by se mohlo spálit.
- Mísu nenaklánějte, jinak její dno nebude plně doléhat na varnou plotýnku a topné těleso by se mohlo spálit.
- Spotřebič nezapínejte, dokud nebudete připraveni k vaření.

Vaření rýže

1 Pomocí dodávané odměřovací nádobky odměřte rýži tak, že ji naplníte zarovnaně po okraj. Podle obecného pravidla stačí jedna odměrka pro jednu osobu, ale množství se může lišit podle individuálních preferencí.

2 Rýži řádně několikrát propláchněte vodou a nechte okapat. V opačném případě by se nemusela správně uvařit nebo se v rýžovaru může hromadit pára. Neproplachujte rýži ve vnitřní míse, protože by se mohla poškodit.

3 Rýži nasypte do vnitřní mísy a zarovnejte její povrch. Značky uvnitř mísy slouží pro měření množství vody a jsou uvedeny v litrech a odměrkách. Přidejte studenou vodu po odpovídající značku znázorněnou na vnitřku mísy. Pokud chcete například uvařit 6 odměrek rýže, nasypte rýži do vnitřní mísy a doplňte vodou do úrovně značky pro šest odměrek.

- Minimální kapacita jsou 4 odměrky, maximální 10 odměrek.
- Nikdy nedolévejte vodou přímo z kohoutku, vždy používejte odměrku.

DŮLEŽITÉ: Nepřekročte nejvyšší znázorněnou hladinu.

4 Vložte vnitřní mísu do rýžovaru a dejte pozor, aby na vnějším povrchu mísy nezůstala žádná rýže nebo voda.

5 Zakryjte poklicí tak, aby ventil v poklici směřoval od vás.

6 Zapojte rýžovar do elektrické zásuvky. Rozsvítí se oranžová kontrolka zapnutí.

7 Zmáčkněte vypínač a rýžovar se spustí. Rozsvítí se modré světlo a oranžové světlo zhasne.

Poznámka: Během vaření je normální, že se poklice lehce

nadzvedne a kolem okraje probublává voda.

8 Díky měření teploty a hmotnosti rýžovar pozná, kdy je rýže hotová. Když je rýže hotová, hlavní topné těleso se automaticky vypne a rýžovar se přepne do režimu „udržení teploty“. Modré světlo zhasne a rozsvítí se oranžové světlo označující udržování teploty.

9 Rýže, kterou udržujete teplou, byste neměli nechat vyschnout a měli byste ji občas promíchat, jinak se může připálit ke stěně mísy. Nikdy rýžovar nenechávejte v režimu udržování teploty déle než dvě hodiny.

10 Opatrně zvedněte poklici a nechte kondenzovanou vodu odkapat do rýžovaru. Rýži pomocí špachtle načechrejte. Co nejdříve opět zakryjte poklicí. Zamíchanou rýži spotřebujte do 1 hodiny. Malá množství (3 až 4 odměrky) by se měla spotřebovat okamžitě

11 Vypněte spotřebič u zásuvky a vytáhněte napájecí kabel. Vyjměte mísu a servírujte.

- Nikdy mísu z rýžovaru nevyjímejte, když je naplněná vodou.
- Nedoporučujeme vařit ochucenou rýži v sáčcích.

Vaření těstovin

1 Pomocí dodávané odměřovací nádobky odměřte těstoviny tak, že ji naplníte zarovnaně po okraj. Podle obecného pravidla stačí 2 až odměrky těstovin pro jednu osobu, ale množství se může lišit podle individuálních preferencí.

2 Abyste při vaření těstovin dosáhli nejlepších výsledků, použijte speciální podložku na těstoviny **B**.

3 Těstoviny nasypte do vnitřní mísy a zarovnejte jejich povrch. Značky uvnitř mísy slouží pro měření množství vody a jsou uvedeny v litrech a odměrkách. Přidejte vodu po odpovídající značku znázorněnou na vnitřku mísy. Pokud chcete například uvařit 6 odměrek těstovin, nasypte těstoviny do vnitřní mísy a doplňte vodou do úrovně značky pro šest odměrek.

- Minimální kapacita jsou 4 odměrky, maximální 10 odměrek.
- Nikdy nedolévejte vodou přímo z kohoutku, vždy používejte odměrku.

DŮLEŽITÉ: Nepřekročte nejvyšší znázorněnou hladinu.

4 Vložte vnitřní mísu do rýžovaru a dejte pozor, aby na vnějším povrchu mísy nezůstaly žádné těstoviny nebo voda.

5 Zakryjte poklicí tak, aby ventil v poklici směřoval od vás.

6 Zapojte rýžovar do elektrické zásuvky. Rozsvítí se oranžová kontrolka zapnutí.

7 Zmáčkněte vypínač a rýžovar se spustí. Rozsvítí se modré světlo a oranžové světlo zhasne.

Poznámka: Během vaření je normální, že se poklice lehce nadzvedne a kolem okraje probublává voda.

8 U všech druhů těstovin doporučujeme dodržovat dobu vaření uvedenou na obalu plus dalších 10 minut. Na konci doby vaření můžete rýžovar v případě potřeby přepnout na režim „udržovat teplotu“. Modré světlo zhasne a rozsvítí se oranžové světlo označující udržování teploty.

9 Opatrně zvedněte poklici a nechte kondenzovanou vodu odkapat do rýžovaru. Pomocí špachtle promíchejte těstoviny, které jsou poté připraveny k podávání. Pokud používáte režim udržení teploty, co nejdříve opět zakryjte poklicí. Těstoviny spotřebujte do 1 hodiny.

10 Vypněte spotřebič u zásuvky a vytáhněte napájecí kabel. Vyjměte mísu a servírujte.

- Nikdy mísu z rýžovaru nevyjímejte, když je naplněná vodou.

Tipy pro dosažení nejlepších výsledků při vaření

- Aby byly rýže nebo těstoviny uvařené rovnoměrně, rozprostřete je po celé ploše mísy.
- Podle vlastních preferencí můžete přijít na to, že je potřeba lehce upravit množství přidávané vody. Pokud chcete rýži či těstoviny měkčí, přidejte o trochu více vody, a pokud je chcete tvrdší, přidejte vody o něco méně.
- Délka vaření se může lišit podle množství a druhu vařené rýže či těstovin.
- Na dně se může vytvořit tenká rýžová krusta, zvláště při vaření italské nebo předvařené rýže, případně při vaření menšího množství rýže. Proti tvoření krusty může pomoci rozetření půl lžičky oleje na dně mísy, ale nelze mu zabránit ve všech případech.

Návod , je možné stáhnout ze stránek www.morphyrichards.cz

Čištění a údržba

Před čištěním a údržbou vypněte spotřebič a odpojte ho od sítě.

- Mísu a poklici umyjte v teplé vodě s mycím prostředkem a utřete do sucha.
- Samotný spotřebič otřete vlhkým hadříkem. Nepoužívejte brusné čisticí prostředky ani prostředky obsahující rozpouštědla.
- Pokud se na dně mísy přichytily potraviny, nechte je před umytím chvíli odmočit.
- Samotný spotřebič neponořujte do vody ani do něj nelijte vodu. Do vody je možné ponořit pouze vnitřní mísu.
- Dbejte na to, aby prostor mezi samotným spotřebičem a vnitřní mísou byl pořád čistý a bez kousků rýže, těstovin apod.

Je to důležité kvůli řádnému kontaktu mezi oběma součástmi.

DŮLEŽITÉ: Hnědé skvrny a škrábance, které se mohou objevit po mnoha hodinách používání, nepředstavují žádný problém. Zaručujeme, že nepřilnavý povrch splňuje normy a předpisy pro materiály vhodné pro kontakt s potravinami.

Péče o mísu

Používejte plastovou nebo dřevěnou lžíci, nikoli kovovou, abyste nepoškodili povrch mísy.

Bezpečnostní vypnutí

Spotřebič je vybaven tepelnou pojistkou, která při nehodě automaticky odpojí napájení. Pokud k tomu dojde, je nutné spotřebič nechat opravit u společnosti Morphy Richards nebo v autorizovaném servisu.

LINKA PODPORY

Máte-li se spotřebičem jakékoliv problémy, bez váhání nám zavolejte.

S velkou pravděpodobností vám budeme moci poradit lépe než obchod, kde jste ho koupili.

Připravte si následující informace, aby mohl náš personál váš dotaz rychle vyřešit.

- Název výrobku.
- Číslo modelu uvedené na spodní straně spotřebiče.
- Sériové číslo uvedené na spodní straně spotřebiče.

DVOULETÁ ZÁRUKA

Musíte si uschovat stvrzenku od prodejce jako doklad o nákupu. Stvrzenku připevněte sešívačkou na zadní obal pro budoucí referenční účely.

Pokud se výrobek porouchá, poznamenejte si následující informace. Tato čísla najdete na základně výrobku.

Č. modelu
Sériové č.

Všechny výrobky společnosti Morphy Richards procházejí před opuštěním továrny individuální kontrolou. V nepravděpodobném případě, že se prokáže závada, se musí výrobek do 28 dnů od data koupě vrátit do místa, kde byl zakoupen, aby se mohl vyměnit.

Pokud dojde k závadě po 28 dnech a do 24 měsíců od data původní koupě, musíte kontaktovat linku podpory a uvést číslo modelu a sériové číslo výrobku nebo napsat společnosti Morphy Richards na uvedenou adresu.

Můžete být požádáni o vrácení kopie dokladu o koupi.

S výjimkou níže uvedených případů (viz Výjimky) bude vadný spotřebič obvykle během sedmi pracovních dnů od data přijetí opraven nebo vyměněn a odeslán zpět.

Pokud bude výrobek z jakéhokoliv důvodu během dvouleté záruční lhůty vyměněn, záruka na nový výrobek se bude počítat od data původní koupě. Proto je velmi důležité, abyste uschovali původní stvrzenku nebo fakturu s vyznačeným datem původní koupě.

Platnost dvouleté záruky na spotřebič je podmíněna používáním podle dodaných pokynů výrobce. Například se musí pravidelně vyprazdňovat misky na drobky.

Výjimky

Společnost Morphy Richards nebude povinna opravit nebo vyměnit výrobek podle záručních podmínek v následujících případech:

1 Závada byla způsobena nebo zaviněna nevhodným, chybným nebo nedbalým používáním nebo používáním způsobem, který je v rozporu s doporučeními výrobce, nebo proudovými nárazy v síti či poškozením při přepravě.

2 Spotřebič byl napájen jiným napětím, než jaké je uvedeno na výrobku.

3 Došlo k pokusu o opravu jinými osobami než naším servisním personálem (nebo autorizovaným prodejcem).

4 Spotřebič se pronajímal nebo používal k jiným účelům než v domácnosti.

5 Tento spotřebič je použitý.

6 Společnost Morphy Richards neodpovídá za žádné opravy prováděné v záruční lhůtě.

7 Záruka se nevztahuje na žádné plastové filtry pro rychlovarné konvice a kávovary od společnosti Morphy Richards.

8 Baterie a poškození způsobené jejich vytečením není zárukou pokryto.

Tato záruka nepropůjčuje žádná jiná než výše uvedená práva a nevztahuje se na žádné reklamace týkající se následných ztrát nebo škod. Tato záruka je nabízena jako další výhoda a nemá vliv na vaše zákonná práva spotřebitele.

CZ

RC48746MCzRev2:9225 47507 MEE pump - Jon 3/11/09 10:51 Page 10

RC48746MCzRev2:9225 47507 MEE pump - Jon 3/11/09 10:51 Page 11

GB Morphy Richards products are intended for household use only.
See usage limitations within the location sub-heading in the important safety instructions.
Morphy Richards has a policy of continuous improvement in product quality and design.
The Company, therefore, reserves the right to change the specification of its models at any time.

The After Sales Division,
Morphy Richards Ltd, Mexborough, South Yorkshire, England, S64 8AJ
Helpline (office hours) UK 0845 871 0954 Republic of Ireland 1800 409119

CZ Výrobky Morphy Richards jsou určeny pouze k použití v domácnostech. Podívejte se na omezení použití v podtitulku umístění v důležitých bezpečnostních pokynech.
Morphy Richards usiluje o neustálé zdokonalování kvality a provedení.
Proto si vyhrazuje právo kdykoliv změnit specifikace svých modelů.

Tauer Elektro a.s.
Milady Horákové 4
568 02 Svitavy
T: +420 461 540 130 F: +420 461 540 133

GB

CZ

GB For electrical products sold within the European Community.
At the end of the electrical products useful life it should not be disposed of with household waste.
Please recycle where facilities exist.
Check with your Local Authority or retailer for recycling advice in your country.

CZ Pro elektrické výrobky prodávané v Evropském společenství.
Elektrické výrobky se po skončení životnosti nesmí vyhazovat do domovního odpadu.
Nechte je recyklovat v příslušných zařízeních.
Informace o recyklaci ve vaší zemi si zjistěte od místních úřadů nebo prodejce.

morphy richards

RC48746MCz Rev 2 10/09

www.morphyrichards.com